MONOPRICE

MP Bluetooth® Headphones with Qualcomm® aptX™ Support

P/N 27722

User's Manual

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- Charge the battery before first use and at least once every three months to keep the battery fresh and capable of holding a full charge.

- Do not use this device while operating a motor vehicle, heavy equipment, walking in traffic, or any other situation in which situational awareness is a key to safety.

- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.

- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.

- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.

- These headphones contain a rechargeable Lithium-ion battery. They should only be disposed of in accordance with local, State, and Federal guidelines for the disposal of electronic waste.

INTRODUCTION

Thank you for purchasing these MP Bluetooth® Headphones! These headphones utilize a Bluetooth version 4.1 radio, which allows you to stream audio from your Bluetooth-equipped smartphone or tablet. They feature the Qualcomm® aptX™ audio codec, which improves audio streaming quality when paired with an aptX-equipped device. They can be simultaneously paired to up to two devices and include a 3.5mm stereo audio jack for direct connections. The battery power status can be viewed on screen when paired with an iOS® device.

FEATURES

- Compatible with the Bluetooth® 4.1 + EDR specification

- Supports the Qualcomm® aptX™ audio codec

- Includes 3.5mm stereo audio jack for direct connections

- Can be paired to up to two devices

- Battery power status viewable on iOS® devices

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website **www.monoprice.com** during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at **support@monoprice.com**
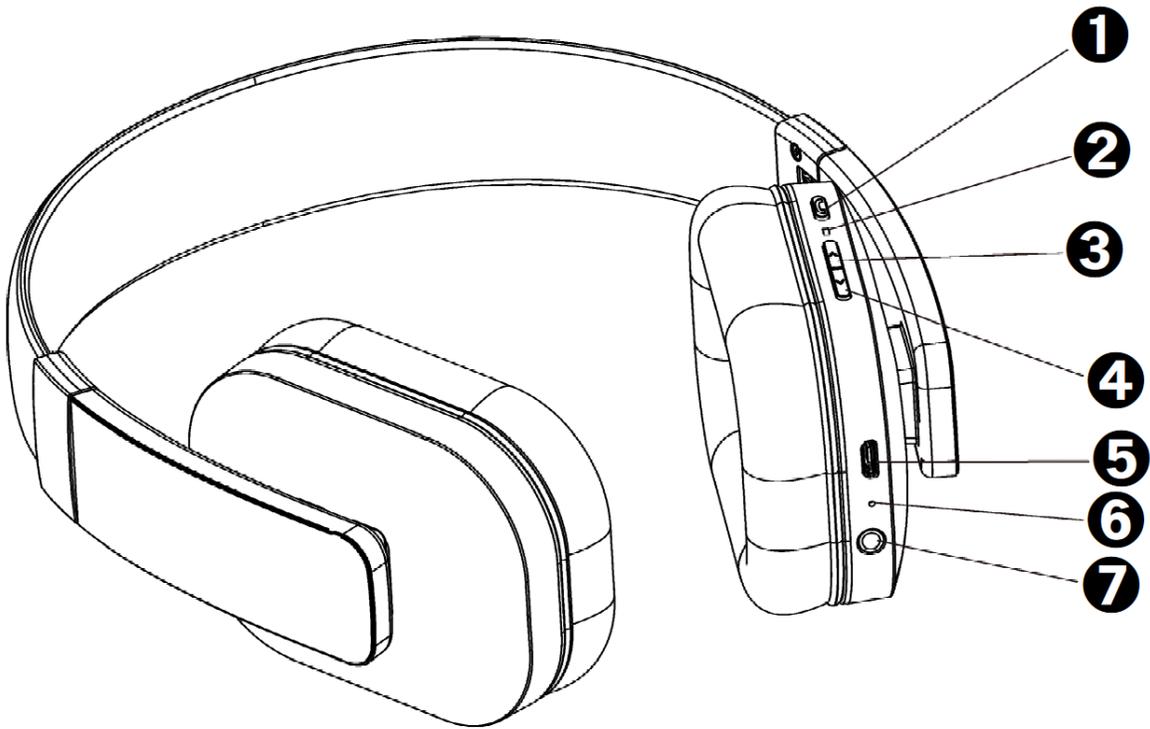
PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x MP Bluetooth® headphones

1x Micro USB charging cable

1x 3.5mm audio cable

PRODUCT OVERVIEW

1. Multifunction Button
2. LED Indicator
3. Up Button
4. Down Button

5. Micro USB Port
6. Microphone
7. 3.5mm Audio Jack

OPERATION

Power On: With the headphones powered off, press and hold the **Multifunction Button (1)** for 2 seconds. The headphones will power on and the **LED Indicator (2)** will flash blue 2 times.

Power Off: With the headphones powered on, press and hold the **Multifunction Button (1)** for 3 seconds. The **LED Indicator (2)** will flash red 2 times and the headphones will power off.

Increase Volume: Momentarily press the **Up Button (3)** to increase the volume one step. A "tick" sound can be heard when the maximum volume level is reached.

Decrease Volume: Momentarily press the **Down Button (4)** to decrease the volume one step. A "tick" sound can be heard when the minimum volume level is reached.

Play/Pause: Momentarily press the **Multifunction Button (1)** to start or pause playback.

Next Track: Press and hold the **Up Button (3)** for 2 seconds to skip ahead to the next track.

Previous Track: Press and hold the **Down Button (4)** for 2 seconds to skip back to the previous track.

Answer Call: Momentarily press the **Multifunction Button (1)** to answer an incoming phone call.

End Call: Momentarily press the **Multifunction Button (1)** to end a call in progress.

Reject Call: Press and hold the **Up Button (3)** for 2 seconds to reject an incoming phone call.

Swap Devices: With a phone call in progress on the headphones, press and hold the **Up Button (3)** for 2 seconds to switch the call from the headphones to your phone. Press and hold the **Up Button (3)** for 2 seconds to switch the call back to the headphones.

Last Number Redial: With no call in progress, momentarily press the **Multifunction Button (1)** twice to redial the last number.

Call Mute: With a call in progress, press and hold the **Down Button (4)** for 2 seconds to toggle the call mute function on or off.

Reset: Connect the headphones to a computer using the included micro USB cable to reset the headphones back to the factory default settings. The **LED Indicator (2)** will flash red twice to indicate that the reset is complete.

LED STATUS

Operation	LED Status
Power On	LED flashes blue 2 times
Power Off	LED flashes red 2 times
Pairing	LED flashes red and blue alternately
Standby	LED flashes blue 3 times in 5 seconds
Incoming Call	LED flashes blue continuously
Low Battery	LED flashes red 2 times every 2 seconds
Charging	LED illuminates red while charging and changes to blue when charging is complete.

PAIRING

Perform the following steps to pair the headphones with a smartphone or tablet. Note that the headphones can be simultaneously paired with 2 devices.

1. Ensure that the headphones are powered off.

2. Press and hold the **Multifunction Button (1)** for 5 seconds. The **LED Indicator (2)** will flash red and blue alternately, indicating that the headphones are in pairing mode.

3. Search for available Bluetooth® devices on your device and select the **MP27722** entry. If prompted for a passcode, enter **0000** (four zeroes). The **LED Indicator (2)** will cease flashing.

PHYSICAL CONNECTION

If you do not wish to use the Bluetooth® streaming or if you want to listen to a device that is not Bluetooth-enabled, plug one end of the included 3.5mm audio cable into the **3.5mm Audio Jack (7)** on the headphones, then plug the other end into the headphone output on your audio source device.

CHARGING

To charge the headphone, plug one end of the included micro USB cable into the **Micro USB Port (5)** on the headphones, then plug the other end into a USB charger. Do not plug it into a computer, unless you want to reset your pairings. The **LED Indicator (2)** will illuminate red while charging is in progress and will change to blue when charging is complete.

Note: The headphones must be charged before first use and at least once every 3 months to keep the battery fresh and capable of holding a full charge.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website **www.monoprice.com** during regular business hours, 7 days a week. You can also get assistance through email by sending a message to **tech@monoprice.com**

SPECIFICATIONS

Model	27722
Frequency Response	20Hz ~ 20kHz
Sound Pressure Level	118dB ±3dB
Impedance	32 ohms
Bluetooth® Version	4.1
Support Bluetooth Profiles	A2DP, AVRCP, HSP, HFP
Wireless Range	up to 32 feet (10 meters)
Talk/Playback Time	up to 14 hours on a full charge
Standby Time	up to 540 hours on a full charge
Dimensions	7.9" x 7.1" x 2.6" (200 x 180 x 65 mm)
Weight	9.0 oz. (256 g)